

INFORMAZIONI PER UN FUNZIONAMENTO SICURO DEL TELECOMANDO

Il telecomando può essere utilizzato da bambini di età non inferiore a 8 anni e da persone con ridotte capacità fisiche, sensoriali o mentali, o prive di esperienza o della necessaria conoscenza, purché sotto sorveglianza oppure dopo che le stesse abbiano ricevuto istruzioni relative all'uso sicuro dell'apparecchio, nonchè alla comprensione dei pericoli ad esso inerenti. I bambini non devono giocare con il telecomando. La pulizia e la manutenzione, destinata ad essere effettuata dall'utilizzatore, non deve essere effettuata da bambini senza sorveglianza.



LEGENDA Tasti



Tipi di pressione sui tasti

- click
- click prolungato (2 s)
- click simultaneo prolungato (2 s)
- click simultaneo molto prolungato (10 s)

ATTENZIONE!
Per controllare la cappa tramite telecomando eseguire la procedura di affiliazione (vedi paragrafo 1).

IN CASO DI MALFUNZIONAMENTO
Seguire la procedura di assegnazione nuovo codice (vedi paragrafo 2). Scollegare e ricollegare la cappa alla rete elettrica. Ripetere la procedura di affiliazione (vedi paragrafo 1).

*** ATTENZIONE!**
Alcune funzioni contrassegnate con (*), sono attivabili solo su alcuni modelli di cappa. Fare riferimento al manuale d'uso della propria cappa per maggiori informazioni.

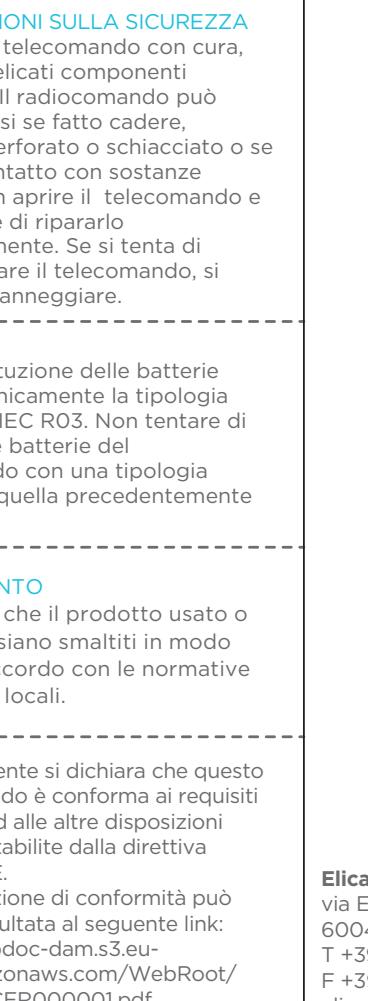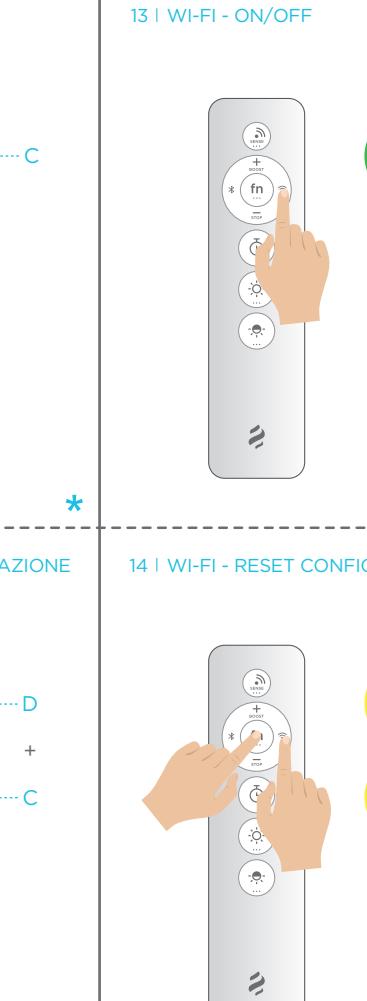


FCC ID :2A7UO-ECBO181479



IT | EN INSTRUCTIONS FOR SAFE OPERATION OF THE REMOTE CONTROL

The remote control can be used by children who are younger than 8 years old and by persons with reduced physical, sensory or mental capacity, or without experience or the specific knowledge, as long as they are under surveillance or after they have received instructions regarding the safe use of the remote control and understand the dangers related to it. Children must not play with the remote control. The cleaning and maintenance that should be carried out by the user should not be done by unsupervised children.

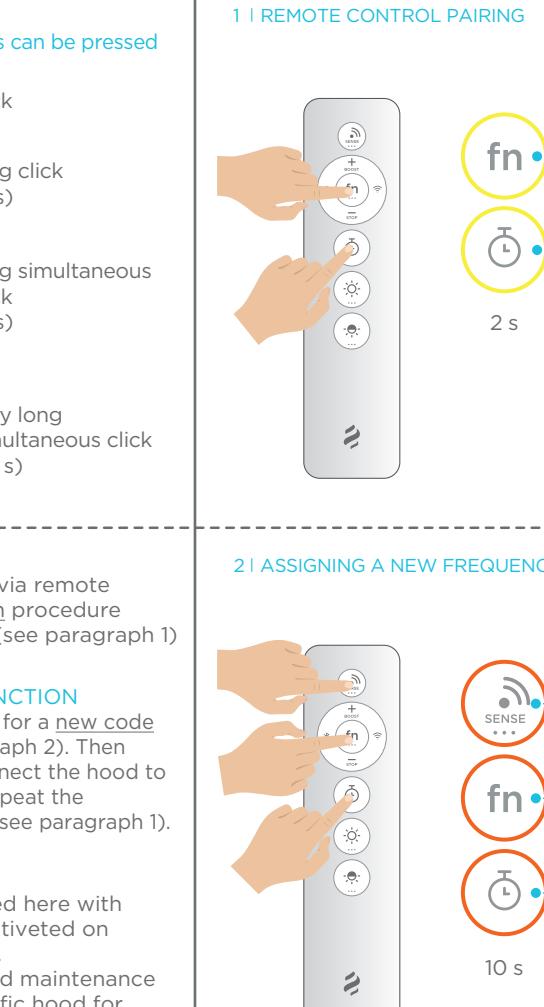

KEY Keys

KEY Ways in which the keys can be pressed

- click
- long click (2 s)
- long simultaneous click (2 s)
- very long simultaneous click (10 s)

1 | REMOTE CONTROL PAIRING

3.1 | SUCTION - INCREASE SPEED

3.2 | BOOST ACTIVATION

3.1 | SUCTION - INCREASE SPEED

+ 2 s

3.2 | BOOST ACTIVATION

+ 2 s

5.1 | AIR QUALITY SENSOR - ON/OFF

5.2 | SENSOR CALIBRATION

5.1 | AIR QUALITY SENSOR - ON/OFF

+ 2 s

5.2 | SENSOR CALIBRATION

+ 2 s

7.1 | LIGHT - ON/OFF

7.2 | LIGHT - DIMMER (*)

7.1 | LIGHT - ON/OFF

+ 2 s

7.2 | LIGHT - DIMMER (*)

+ 2 s

11 | BLUETOOTH - ON/OFF

13 | WI-FI - ON/OFF

15 | GREASE AND ODOUR FILTERS - RESET SATURATION ALARM

17 | SAFETY INFORMATION

Use the remote control with care; it contains delicate electronic parts. The remote control may be damaged if dropped, burned, pierced or crushed, or if it comes into contact with liquid substances. Do not open the remote control and do not attempt makeshift repairs. If the remote control is disassembled, it may be damaged.

BATTERY
To replace the batteries, use only the UM-3AAA / IEC R03 type. Do not attempt to replace the remote control batteries with a type other than that previously indicated.

ATTENTION
ON SOME MODELS, THIS FUNCTION IS REPLACED BY THE PROCEDURE DESCRIBED IN POINT 18 OF THIS MANUAL.

This certificate attests that this remote control is in compliance with the essential requirements and other pertinent dispositions established by Directive 2014/53/UE. The declaration of conformity can be consulted at the following link: <https://webdoc-dam.s3.eu-west-1.amazonaws.com/WebRoot/Certificati/CER000001.pdf>

DISPOSAL WARNING
Do not dispose of electrical products in the general waste and ensure the used product or batteries are disposed safely according to your local authority and regulations.

elica
via Ermanno Casoli, 2
60044 Fabriano AN Italy
T +39 0732 6101
F +39 0732 610249
elica.com

protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

IF THERE IS MALFUNCTION

Follow the procedure for a new code allocation (see paragraph 2). Then disconnect and reconnect the hood to the power supply. Repeat the affiliation procedure (see paragraph 1).

CAUTION!

To control the hood via remote control, the affiliation procedure must be carried out (see paragraph 1).

4.1 | SUCTION - DECREASE SPEED

4.2 | SWITCHING OFF THE HOOD

4.1 | SUCTION - DECREASE SPEED

+ 10 s

4.2 | SWITCHING OFF THE HOOD

+ 2 s

6 | TIMED AUTOMATIC SWITCH-OFF

8.1 | AMBIENT LIGHT - ON/OFF

8.2 | AMBIENT LIGHT - DIMMER

10 | HOB TYPE SETTING COOKING (induction/gas/electric)

12 | BLUETOOTH - NEW ASSOCIATION

14 | WI-FI - RESET CONFIGURATION

16 | GREASE AND ODOUR FILTER MENU - ENABLE / DISABLE SATURATION ALARM

18 ** | GREASE AND ODOUR FILTER MENU - ENABLE / DISABLE SATURATION ALARM

Step 1 | Menu activation

+ 2 s

Step 2 | Filter selection (grease/odour)

+ 2 s

Step 3 | Enable/disable Selected filter

+ 2 s

ATTENTION

ON SOME MODELS, THIS PROCEDURE REPLACES THE FUNCTIONS DESCRIBED IN POINTS 16 AND 17 OF THIS MANUAL.

** ATTENTION

ON SOME MODELS, THIS PROCEDURE REPLACES THE FUNCTIONS DESCRIBED IN POINTS 16 AND 17 OF THIS MANUAL.